9189ko-000

Electrolux

INSTRUCTION MANUAL

Z 65
Z 66

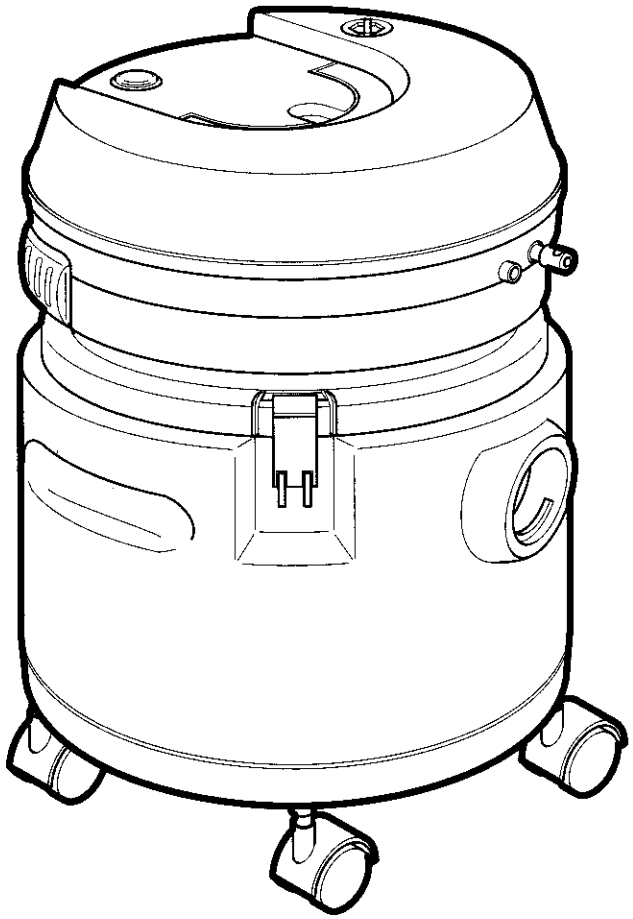

CONTENTS

GENERAL INSTRUCTIONS	2
HOW TO USE THE APPLIANCE AS A DRY VACUUM CLEANER	3-5
HOW TO USE THE APPLIANCE AS A WET VACUUM CLEANER	6-7
HOW TO USE THE APPLIANCE FOR SHAMPOOING	8-13
SPECIAL REMARKS	14-15
ECOLOGY	15

ENGLISH

Thank you for choosing this appliance which has been designed and manufactured to ensure maximum safety and performance. We are sure you will be satisfied with its use.

GENERAL INSTRUCTIONS

- Carefully read these instructions regarding safety, assembly, use and maintenance of the appliance.

- Keep this manual in a safe place. If you hand the appliance over to another person, remember to include the manual as well.

- Never leave the packaging elements around as they are potential source of risk to children.

- Make sure that the electrical characteristics on the appliance rating plate correspond to your mains supply. Change the plug to another which conforms to safety standards if it does not conform with the socket. The appliance is double insulated, therefore it does not require double insulating (earthing).

- We do not advise the use of adapters, multiple sockets and extension leads.

- Before switching on the appliance, check that the filters are in their correct places.

- Do not allow children or inesperienced persons to use the appliance.

- Only use the appliance to clean domestic environments.

- Keep the mains cable away from sources of heat, oil, sharp edges and rough surfaces. Never pull on the cable to extract from the socket or to move the appliance.

- Never use the appliance with wet hands or feet, or bare feet.

- Keep the nozzles and the suction hose ends away from the ears and eyes when the appliance is operating.

- Never use the appliance in the vicinity of inflammable gases.

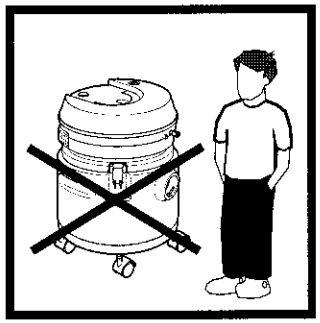

- Turn off the switch after use.

- Do not leave the appliance with the plug in the socket when not in use.

- Remove the plug from the socket before carrying out any maintenance work.

- When necessary, always contact your local service centres.

- **Always use original spare parts.**

- Never modify the appliance.

- Always store the appliance in a dry place away from sources of heat. Never leave the appliance exposed to atmospheric agents (rain, sun etc.).

- Cut the electric cable before discarding the appliance.

- **We decline all responsibility for all damages arising from any improper use of the appliance or in cases of tampering with the appliance.**

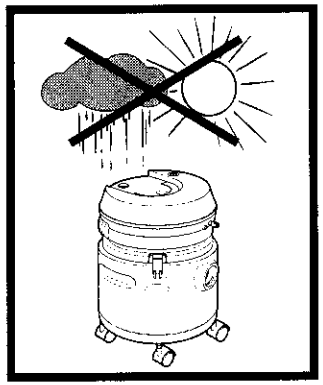

To open the appliance, press catches **8** and remove the accessories contained in tank.

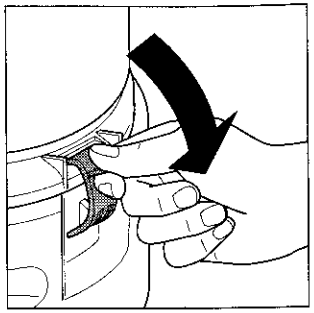

Fit the five castors **9** by fully driving each pin into the holes under tank **7**.

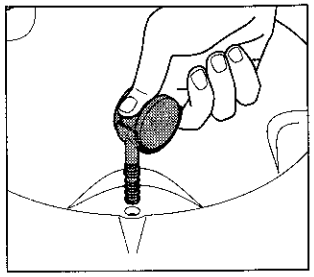

Prepare the appliance according to required use as illustrated below.

HOW TO USE THE APPLIANCE AS A DRY VACUUM CLEANER

Mount the device using the pieces indicated in scheme **A.**

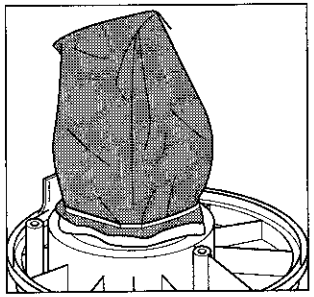

Fit cloth filter **3** and paper filter **4** and secure them with rubber band **5**.

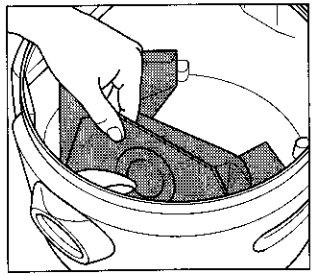

Δ Dry tank **7** well inside.
Fit maxi dust bag **6**.
The appliance can operate without the maxi dust bag, the dust is then collected in the tank. However use of this bag is advisable.

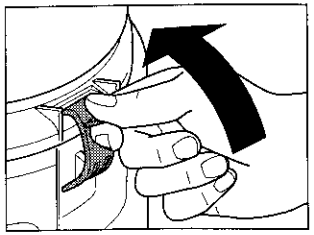

Fasten lid **2** to tank **7** using catches **8**.

paying attention that tab **a** on cover **2** fits into the groove **b** of tank **7**.

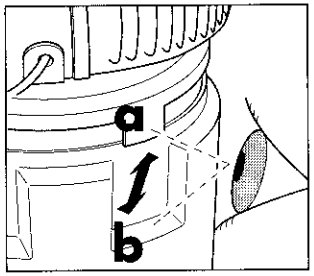

Snap one end of hose **10** into connection **27** and turn clockwise to lock it.

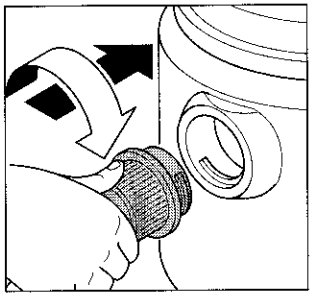

Couple tubes **12** together

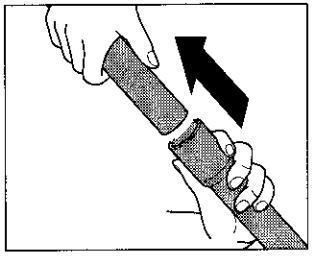

and connect them to handle **23**.

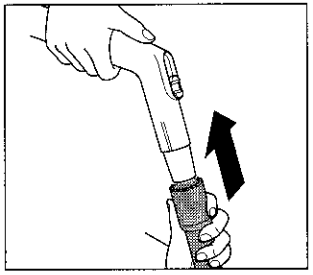

Connect a suitable accessory to the end of the tube set chosen from one of the following:
- floor attachment **15** (push button ★ changes brush position:
  brushes out for hard surfaces; brushes retracted for carpets);
- upholstery nozzle **16**;
- crevice nozzle **14**;
- nozzle with brush **13**.

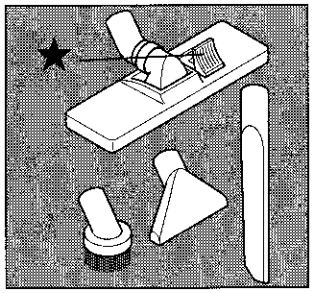

Ensure the shampoo lever **29** is in the dry vacuuming position.

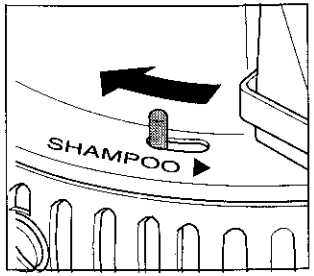

After assembling these items, the appliance is ready for use.
Connect the plug to the mains socket and press the on/off switch **28**.

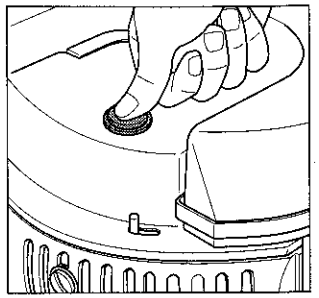

The appliance is provided with suction control. To adjust intensity of suction, move slider **11**.

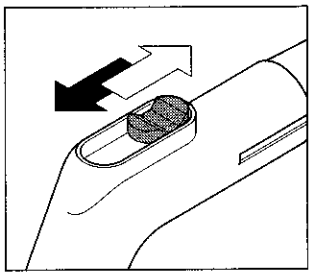

▲ Never vacuum clean hot ash, burning cigarette stubs, inflammable or corrosive substances, or particularly fine dusts.

If deodorant products are introduced in maxi dust bag **6**, follow the manufacturer's instructions.

Disassemble the accessories following the assembly operations but in reverse order.

Δ Change the maxi dust bag when full and periodically change paper filter **4**. When dirty, wash cloth filter **3** and leave it to dry; replace it if damaged.

▲ Always change the maxi dust bag **6**, plus paper and cloth filters after using the appliance to clean floors previously treated with detergents in powder form; these contain substances which if left for long in the appliance, cause damage to it.

HOW TO USE THE APPLIANCE AS A WET VACUUM CLEANER

Mount the device using the pieces indicated in scheme **B** ensuring maxi bag, paper and cloth filter are removed.

Fasten lid **2** to tank **7** using catches **8**,

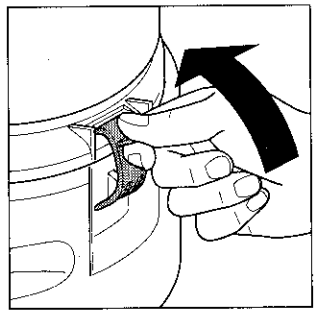

paying attention that tab **a** on cover **2** fits into the groove **b** of tank **7**.

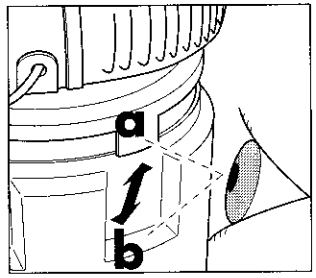

Snap one end of hose **10** into connection **27** and turn clockwise to lock it.

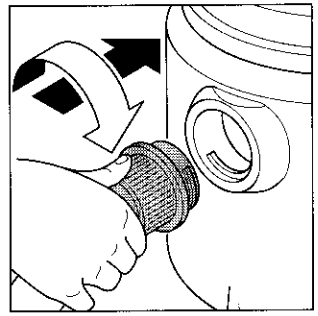

Couple tubes **12** together and connect them to handle **23**.

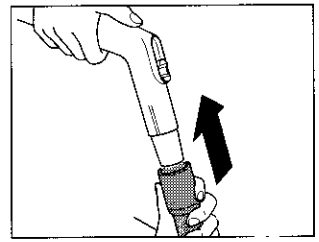

Connect a suitable accessory to the end of the tube **12** set chosen from one of the following:
- wet suction attachment for carpets **17**;
  add adapter **18** for hard floors;
- upholstery nozzle **16**;
- crevice nozzle **14**.

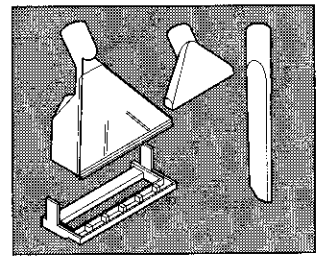

Ensure the shampoo lever **29** is in the dry vacuuming position.

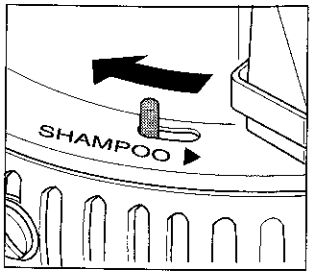

Δ Close slider **11** on handle **23**.

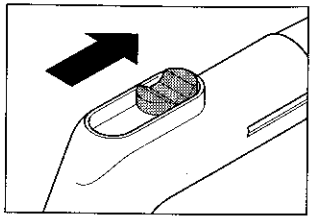

After assembling these items, the appliance is now ready for use.

Plug in the socket to the mains and press the on/off switch **28**.

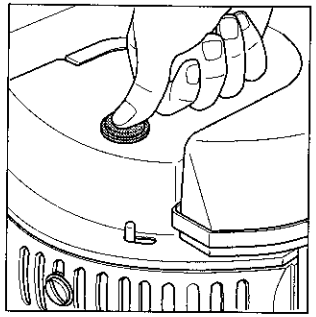

Δ Before putting the appliance away again, keep it switched on for about 30 seconds and carefully perform the operation shown alongside to drain remaing water back into the tank. Then empty any liquid collected in the tank.
Dissasemble the accessories following the assembly operations but in the reverse order.

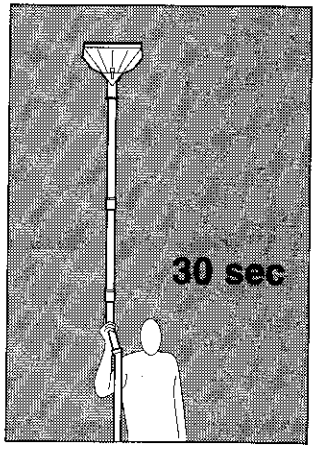

Δ Wash the accessories, then dry them and put them away.

HOW TO USE THE APPLIANCE FOR SHAMPOOING

O Check that the surfaces are resistant to cleaning solution and always vacuum clean them before starting shampooing (see use of appliance as dry vacuum cleaner).

Mount the device using the pieces indicated in scheme **C** ensuring maxi bag, paper and cloth filter are removed.

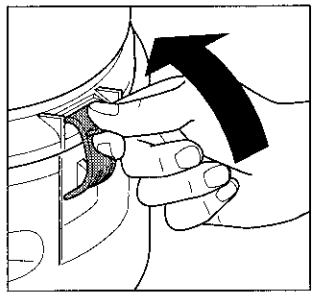

Fasten lid **2** to tank **7** using catches **8**,

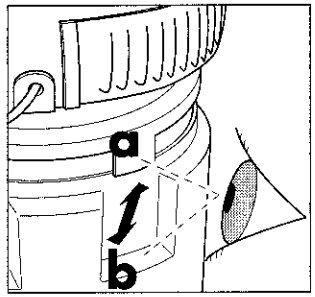

paying attention that tab **a** on cover **2** fits into the groove **b** of tank **7**.

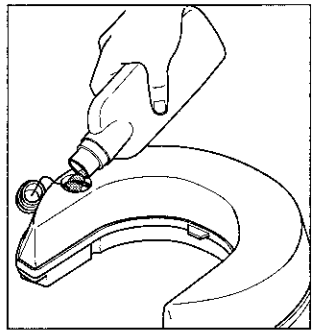

Fill the tank **1** with water and shampoo in the quantities indicated on bottle **21**.

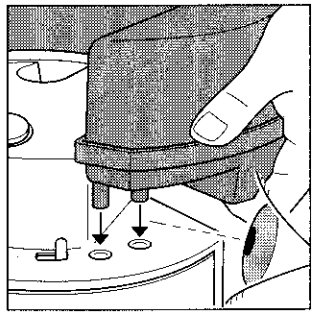

Mount the tank **1** on cover **2** of the equipment, inserting the two tubes into the holes.

and the tab into the groove.

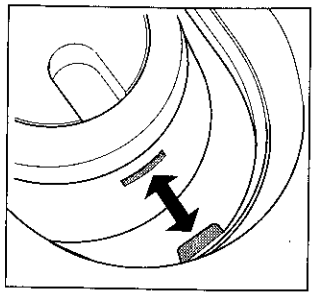

Move the lever in the direction of the arrow to the shampoo position indicated on cover **2**.

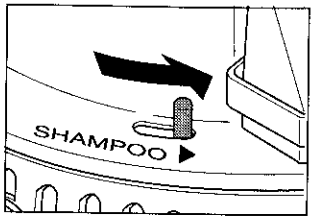

Snap one end of hose **10** into connection **27** and turn clockwise to lock it.

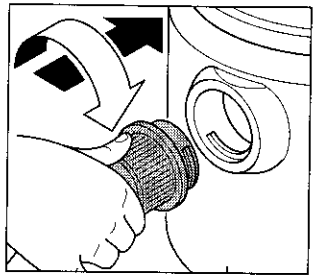

Press trigger control **19** into special grooves on handle **23** and snap into position.

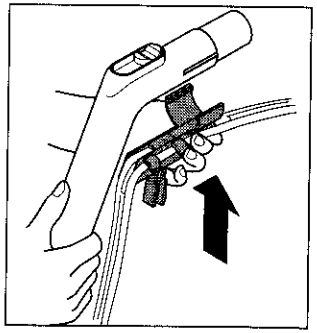

Δ Close slider **11** on handle **23**.

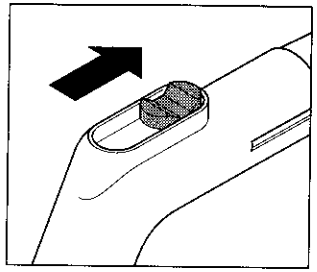

Insert the metal end of the shampoo tube **26** into valve **22** set on tank **1**

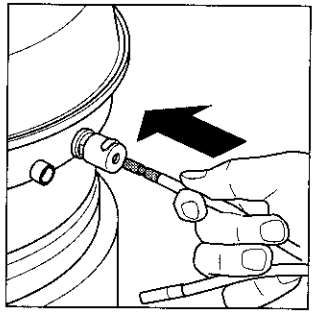

and insert the plastic end of the second tube into the hole nearby the valve, rotating it clockwise and exerting a light pressure.

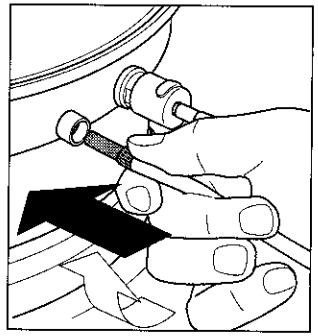

Couple tubes **12** together

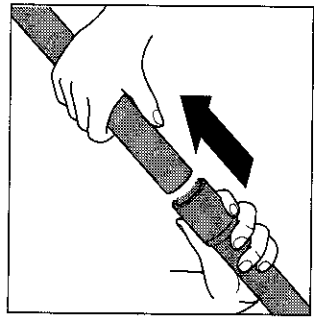

and connect them to handle **23**.

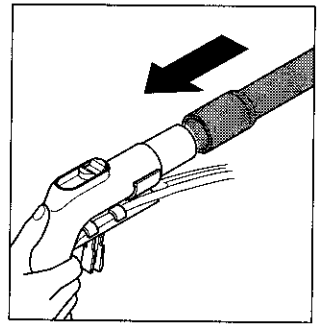

Insert clips **20** into the slot in the tubes **26** and hook them to hose **10** and to tubes **12**.

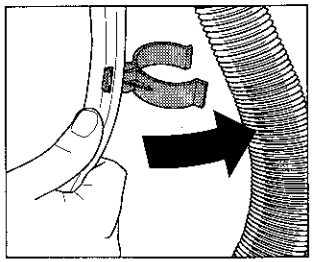

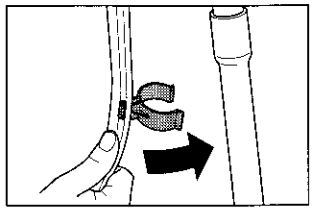

Connect shampoo nozzle **17** onto the end of tube set **12**

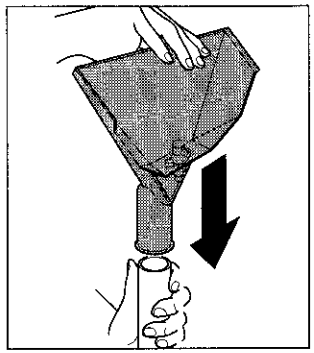

and connect the rubber ends of the two tubes **26**, to the pipes on the shampoo nozzle.

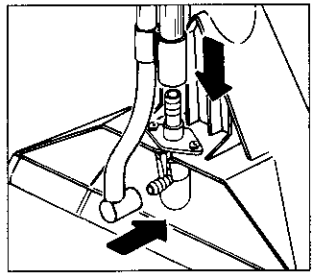

After assembling these items, the appliance is now ready for use.

Plug in the socket to the mains and press the on/off switch **28**.

For shampooing fabric floors or carpets, only use shampoo nozzle attachment **17**.

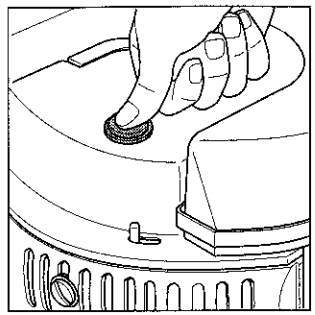

For washing floors with hard surfaces (ceramic tiled, marble, parquet, linoleum, etc.), fit hard floor adaptor **18** onto shampoo nozzle **17** as illustrated.

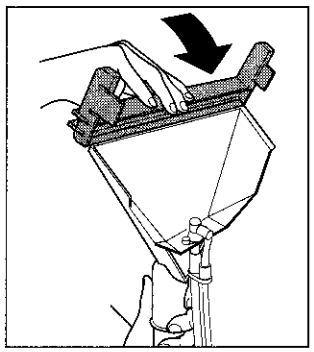

An extra adapter (if supplied with the appliance) can be mounted on the hard floor adapter for improved powerful action; once mounted, it should not be disassembled.

Insert the sponge in one or the other side depending on the surface to be cleaned.

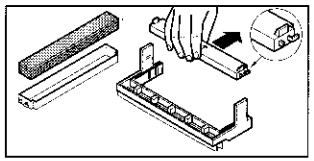

Spray the cleaning solution by pressing trigger control **19** and slide the nozzle in the direction shown.

O Refrain from walking on the surface just after it has been shampooed or washed. Finish cleaning close to the door.

As a guide, one litre of solution is sufficient to clean 5 m^2 of carpet or 8 m^2 of floor with hard surface.

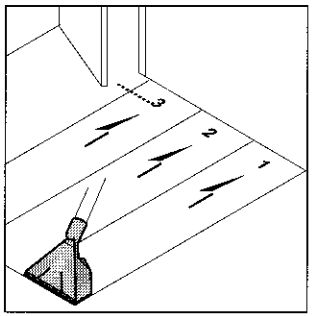

Dissasemble the accessories following the assembly operations but in the reverse order.

To disassemble the metal end of the tube of valve **22** on the tank, slightly press on the button of the valve.

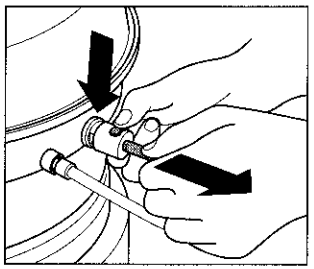

To remove the plastic end of the tube, rotate it counter clockwise pulling it slightly.

Empty the collected liquid from tank **7**.

Wash the accessories, dry and store them.

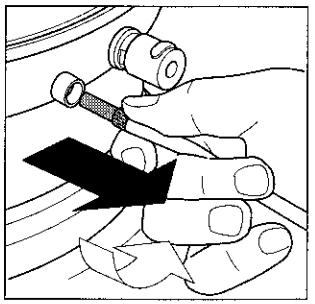

O Never spray the cleaning solution in the direction of electrical sockets or other electrical equipment.

O If, when pressing the trigger control **19**, the shampoo solution does not flow down the tubes **26** check there are no bends along the tubes which could interrupt the flow and that the tubes on tank 1 are well inserted into the holes.

O In order to dry the carpet pass the shampoo nozzle**17** along the surface without pressing spray lever **19** down.

Δ After shampooing, and before storing the equipment, empty the shampoo solution from tank **1** and rinse it. Rinse nozzle **17** to prevent the remaining shampoo solution clogging the nozzle.

O After using the detergent supplied with the appliance, use non foaming detergents which are soluble in water and suitable for shampooing carpets, floors and upholstery with this type of appliance.

SPECIAL REMARKS

▲ Never use the appliance without protective filter **25**. It safeguards the motor. When the filter is dirty, wash it with soapy water and leave it to dry; replace it if damaged.

To remove the protection filter **25**, disassemble the basket as illustrated.
To riassemble the basket, perform the disassembly operation in reverse.

▲ Do not forget to put the float back in the basket.

Do not use the equipment without the filter set behind the exhaust grille **24**. When it is dirty, wash it with water and soap; let it dry and assemble it again; replace it if damaged.

To remove grille **24** use a coin, rotate the locking device clockwise and pull the grille away from the catches on both sides.

Riassemble grille **24** performing the disassembly operation in reverse.

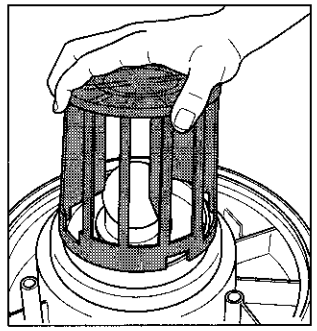

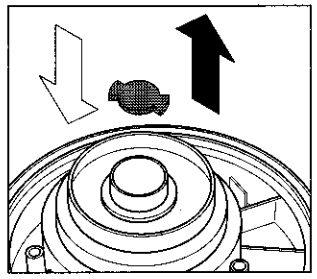

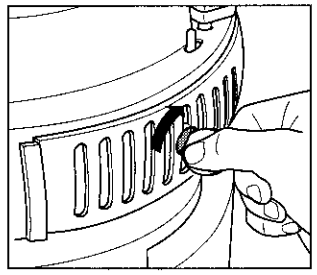

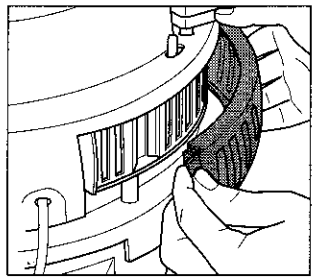

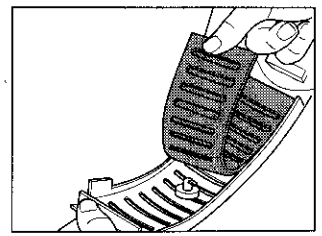

O The appliance is automatically switched off if the motor becomes overheated. In this case, switch off at the mains switch **28** and leave the motor to cool before reusing the appliance.

O If the suction power decreases, unclog the hose, accessories and filters; empty the tank.

If the tank is full of liquid or the machine is overturned, a safety device interrupts suction and the noise level is increased appreciably; switch off the appliance; empty the tank and place the appliance upright. Wait for a few seconds, then switch it on again.

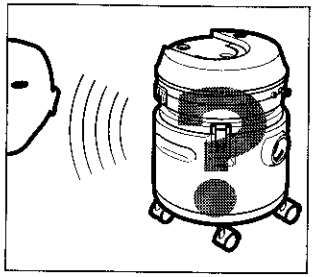

After use, wind the cable along the lower part of cover **2**.

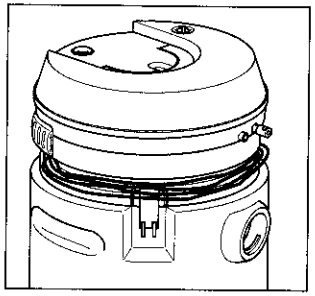

ECOLOGY

O The symbols for the materials used in manufacturing the packaging, components and accessories, as well as the recyclability symbol, are stamped on the various parts provided their size allows. Dispose of these components through the appropriate refuse collector network.

The appliance conforms with EEC directive 89/336 regarding radio interference.

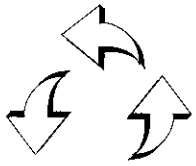

UK and IRELAND only
ELECTRICAL CONNECTION

DOUBLE-INSULATED MACHINES

IMPORTANT

240 volt 50 Hz. machines are fitted with a 13 amp. 3 pin moulded plug. If the available socket outlet is not suitable for the plug supplied, the plug must be cut off and an appropriate plug fitted. The plug thus cut off MUST BE DESTROYED for safety reasons before being disposed of.

Machines built for other voltages and frequencies are not normally supplied with a fitted plug.

If it is necessary to fit a plug, the wires in this power supply cord are coloured in accordance with the following code:

BLUE-NEUTRAL

BROWN-LIVE

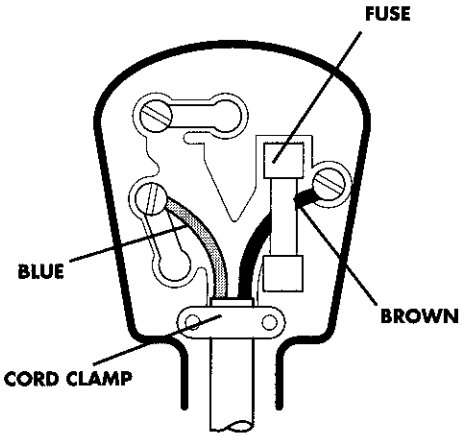

To connect the new plug:

If using a three-pin plug, do not make any connection to the terminal in the plug which is marked with the letter "E" or by the safety earth symbol or coloured green or green & yellow. This machine is double-insulated and no earth connection is necessary.

The wire which is coloured blue must be connected to the terminal in the plug which is marked with the letter "N" or is coloured black or blue.

The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter "L" or is coloured red or brown. If the plug to be fitted does not conform to the above notation then consult a qualified electrician.